

## MOTORCYCLE DOCTOR LLC

Craig Silvers, Owner

PO Box 1676 / 108 N. Business Rt. 5 Camdenton, Mo 65020

local; (573) 346-6867 / toll free; (888) 346-6867

www.MOTORCYCLEDOCTOR.com

craig@motorcycledoctor.com


## **HiSun High Wattage Upgrade Instructions**



1. Unplug and remove rubber plug, slide back.



2. Insert thin release blade to unlock wire connector.

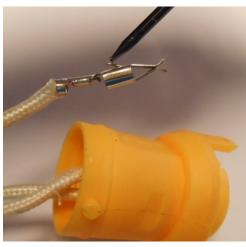

Date:

03-24-17

3. View of lock tab that must be pushed with thin blade.



4. Install all 3 wire clips in any order to the 3 male spades in the Regulator/Rectifier.



5. Apply silicone sealer to waterproof the connection, let it dry.



6. Simply connect 2 wire plug and attach eyelets to the battery or extend as needed..